 

IMPORTANT SAFEGUARDS





SA 1965

SA 1966

BEFORE YOU USE

■ CONTENTS

7 USING AN SD CARD	35
Saving images	36
Displaying the saved data.....	36
Thumbnail display mode.....	37
8 TROUBLE SHOOTING.....	38
9 SPECIFICATIONS	40
General.....	40
Main Camera	40
Illumination Device	41
Trademarks and License	42
Repairable Period.....	42

 
BUNDLED ITEMS




PART NAMES AND FUNCTIONS

Appearance

Operation of the main unit:

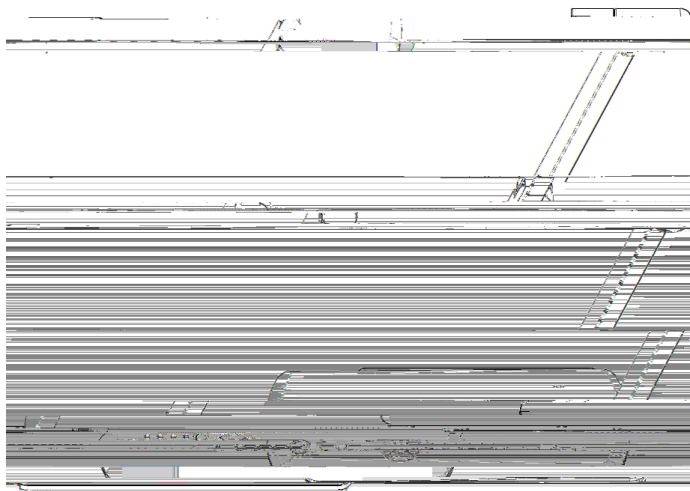


Operating panel

 Rear panel and cable connections



To connect a security cable.

To connect the AC adapter.



To connect the product to a PC with a USB cable.

To connect the product to a device with an analog RGB input terminal.

To connect the product to a device with an analog RGB output terminal.

To connect the product to a device with an HDMI input terminal.



 


Side Panel







Moving Parts of the Mobile Document Camera

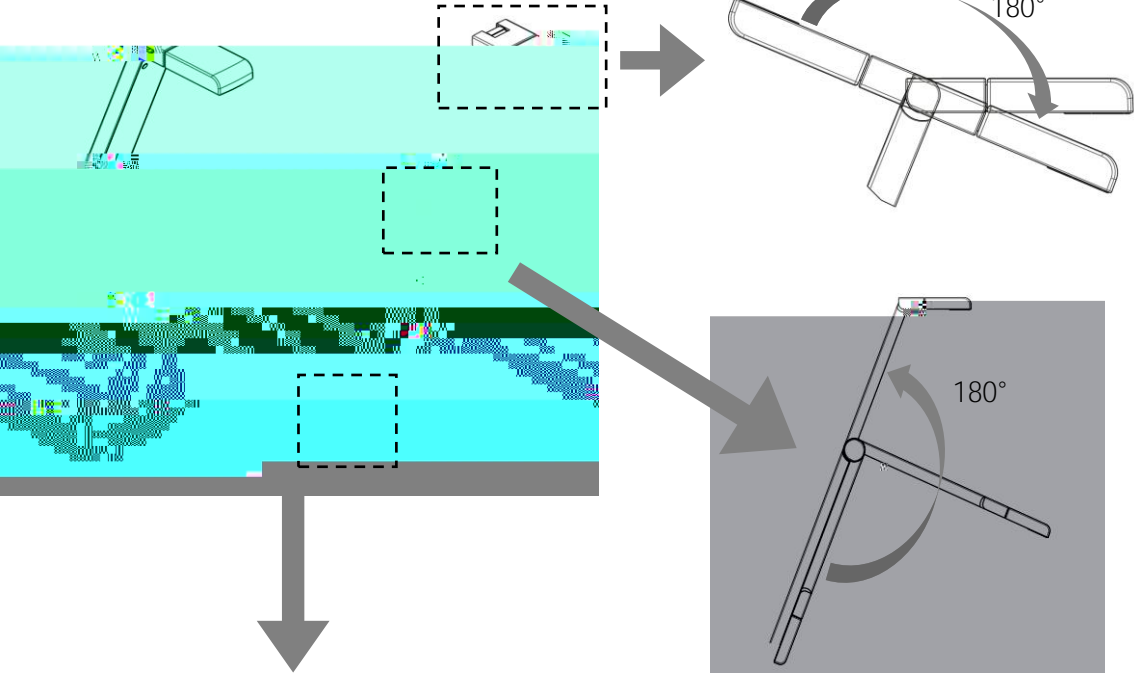

150°

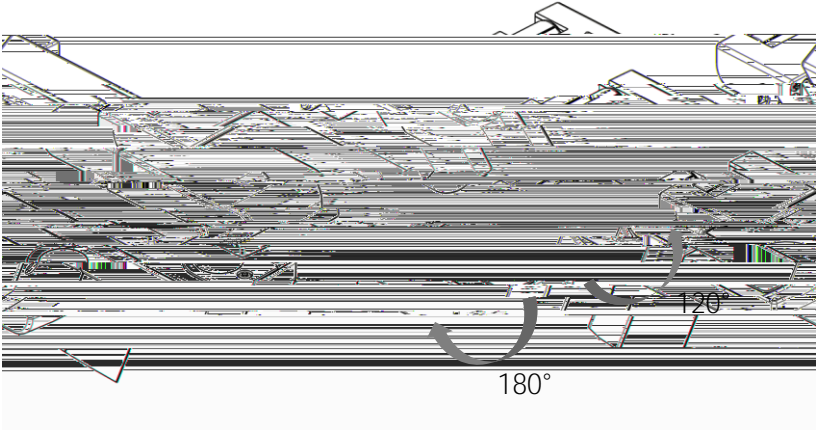 


Connecting to a projector or a monitor

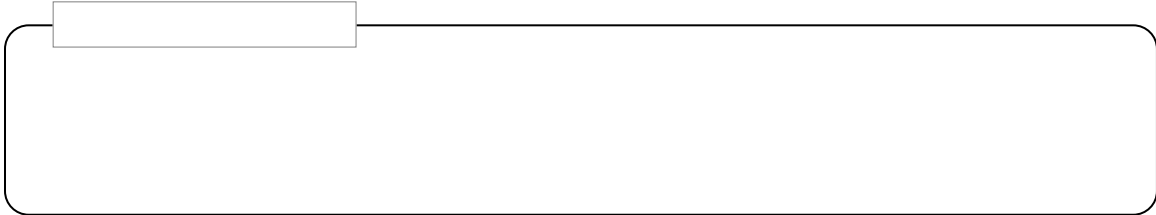 

4 SHOOTING IMAGES

 Adjusting the size

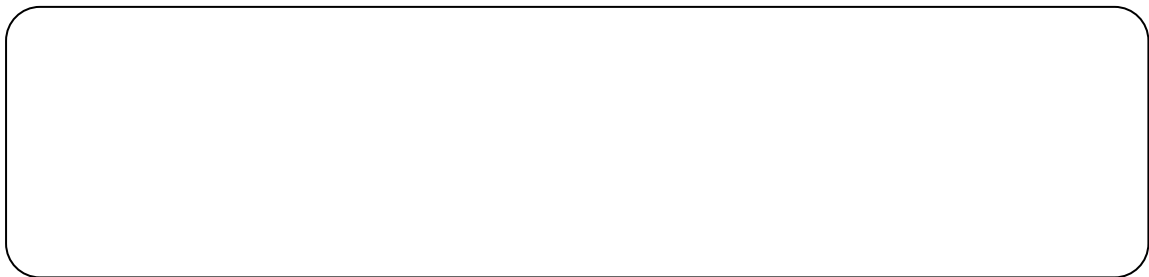

Adjusting the brightness







Switching the output video



 
5 CHANGING THE SETTINGS

Changing the settings

6 USING A USB

Installing the software

Connecting to a PC

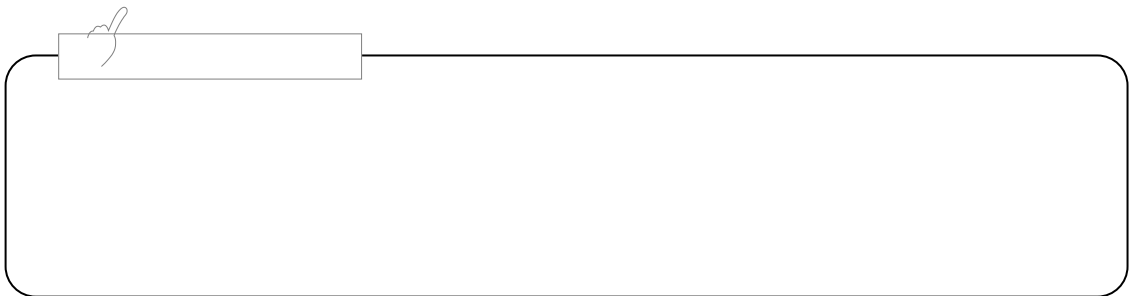

Controlling the product from a USB-connected PC

7 USING AN SD CARD



Thumbnail display mode


Thumbnail display mode menu

Still image display mode menu

8 TROUBLE SHOOTING

Symptom	Possible cause/ remedy
---------	------------------------

Symptom	Possible cause/ remedy
---------	------------------------

 

Trademarks and License

ELMO

6-14, Meizen-cho, Mizuho-ku, Nagoya, 467-8567, Japan

OVERSEAS SUBSIDIARY COMPANIES

ELMO USA CORP.

Headquarters

1478 Old Country Road
Plainview, NY 11803-5034, U.S.A
Tel:(516) 501